

## Spark Tester Adjustable




### INSTRUCTIONS

To check the quality of spark or a no-spark situation.

Refer to diagram below and fit ignition lead to tester terminal. Then connect earth (ground) lead to tester and to suitable point on engine or chassis frame.

Refer to diagram: set the desired length of spark according to the type of ignition coil on vehicle (standard coil, wasted spark or individual pencil coil). Turn the ground electrode to adjust length of spark. (The air gap is much larger than the spark plug gap which is under compression in the combustion chamber).

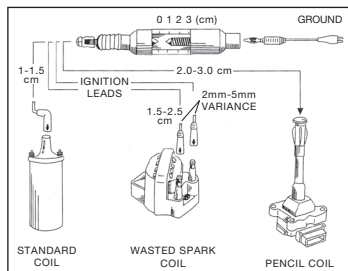

A good strong spark will be blue in colour and jump straight between the electrodes. A weak or poor spark will be red or orange and may track around the electrodes.



**NEW  
PRODUCT**

### Description

Tests the quality of the coil according to spark colour and distance.

- Clear viewing panel
- Detachable lead and crocodile clips
- Fully adjustable to test the strength of spark

### Packaging

Sliding blister

### Additional Information



18 January 2013